



hybrid

central vacuum hose cover

Installation Instructions



STEP 1
Unzip padded zipper section and fold it open side up flat on ground with coiled hose beside it. Zipper starting end on right side and closing end on the left side




STEP 2A
Place "cuff" end of hose through right side of tubular soc. Pull through opening until "cuff" end reaches the left side of soc




STEP 2B
Place "cuff" end of hose through left side of tubular soc



STEP 3
Fold soc backwards on hose approximately 4". Slide fold over to the bottom of cuff

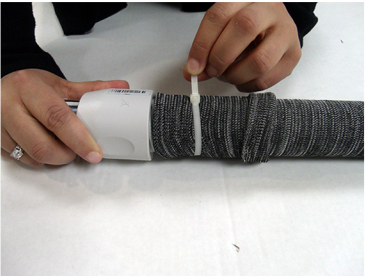

STEP 4A
Secure soc to hose by fastening supplied twist tie around hose and soc

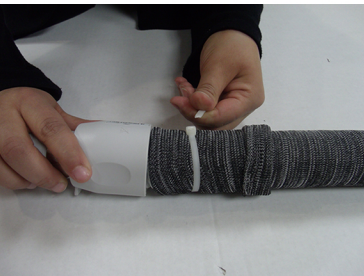

STEP 4B
Break away excess of twist tie by moving it right to left and twist to break off



STEP 5
Cover the twist tie by folding the soc back over it as it appears shown above



STEP 6
With one hand holding cuff end, use the other hand to feed hose through soc opening on opposite side until the soc reaches bottom of hose handle



STEP 7A
On handle end of soc begin to zip up padded section of soc



STEP 7B
Continue to zip up padded section of soc until completely zipped closed around hose



STEP 8
Push as much excess tubular soc towards handle end as possible



STEP 9
Fold back excess soc approximately 4" and repeat steps 4-5 to complete installation



STEP 10
Secure soc to hose by fastening supplied twist tie around hose



STEP 11
Break away excess of twist tie by moving it right to left and twisting



STEP 12
Cover the twist tie by folding the cuff back over



Complete
Once you have secured soc to handle end of hose - installation is complete and should resemble the above picture